

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Instructions for use

Chair 16 mini 50cm, with safety bar 2

EN 14988:2017+A1:2020

WARNING

Never leave the child unattended

Falling hazard: Prevent your child from climbing on the product

Do not use the product unless all components are correctly fitted and adjusted

Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product

Be aware of the risk of tilting when your child can push its feet against a table or any other structure

Do not use the product until the child can sit up unaided

Do not use the product if any part is broken, torn or missing

Use the product only on a flat surface

The product is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg

Recommendations for cleaning and maintenance:

Wipe with a damp cloth

Check periodically that all screws and fasteners are tight

Parts

The high chair is completely assembled. Detachable parts of the chair are the safety bar (with an extra back support, which is not detachable from the safety bar) and high-adjustable footrest.

Allen key x1 

Removing of safety bar and adjustment of the footrest height

