

## Instruction for use

EN 17191:2021

### Children's chair with adjustable footrest

16 mini 50cm

16 mini 50cm, with armrests

# IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

## WARNING

- DO NOT place this product near a window as it can be used as a step by the child and cause the child to fall out of the window
- Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product
- DO NOT place this product near a window where cords from blinds or curtains could strangle a child

Seating is not suitable for children under 3 years old.

Seating is intended for children age 4-7 years (growth 108-121cm).

The chair is completely assembled. Detachable part of the chair is a high-adjustable footrest.

Use the Allen key to adjust the height of footrest.



Do not use the seating if any part is broken, torn or missing and use only spare parts approved by the manufacturer.

## General

The chair may be used only for the intended purpose.

Do not use (do not allow the child to use) the chair as a ladder or a climbing construction.

Do not swing or try to seek balance (do not allow the child to wing or try to seek balance) resting only on the rear feet of the chair.

Chairs must be used in a dry, properly ventilated place, with ambient temperature not less than +18°C and relative humidity 40-60%.

Do not place the chair into intense sunlight or against a heater, as this may cause changes in the colour and appearance of the product.

If free space develops in the joints containing bolts or screws, these must be tightened from time to time.

## Stacking

A stack of chairs must not contain more than 4 chairs.

Chair with armrests is not stackable.

## Maintenance and cleaning

Check periodically that all screws and fixing details are tightened properly.

If dirt or stains appear on the chair, clean it always before drying.

For cleaning, use a soft, slightly moistened clean cloth. Dry the surface after cleaning.

Do not use strong or abrasive cleaning agents. If necessary, soiled surfaces can be cleaned with a small amount of mild detergent or soap. Rinse and dry the surfaces cleaned with a detergent.