

## **Instruction for use**

**Chair 14 mini 50cm, with safety bar 2**

**EN 14988:2017+A2:2024**

# **IMPORTANT! READ CAREFULLY AND KEEP FOR FURTHER REFERENCE**

## **WARNING**

- Never leave the child unattended
- Falling hazard: Prevent your child from climbing on the product
- Do not use the product unless all components are correctly fitted and adjusted
- Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product
- Be aware of the risk of tilting when your child can push its feet against a table or any other structure

Do not use the product until the child can sit up unaided

Do not use the product if any part is broken, torn or missing

Use the product only on a flat surface

The product is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg.

Recommendations for cleaning and maintenance:

- Wipe with a damp cloth.
- Check periodically that all screws and fasteners are tight.

The chair is completely assembled. Detachable parts of the chair are the safety bar (with an extra back support, which is not detachable from the safety bar) and a high-adjustable footrest.

Use the Allen key to remove or reinstall the safety bar and to adjust the height of footrest.

Allen key 